

USER INSTRUCTIONS

LOCKABLE

Seat Fixture -
"DOWN" Anti Rattle Device

To fit:


- With both Locking Devices in the LOCKED position and the Anti-Rattle Devices turned fully anti-clockwise, insert the seat into the rails
- Slide the seat forward or backward slightly, until both Locking Devices lock in the rails
- Rotate both Anti Rattle Devices fully clockwise to engage

To remove:

- Release Anti Rattle Devices by rotating fully anti-clockwise
- Rotate Locking Devices 90 degrees anti-clockwise to the UN-LOCKED position
- Slide the seat slightly forward or backward to lift from the rails



LOCKED position

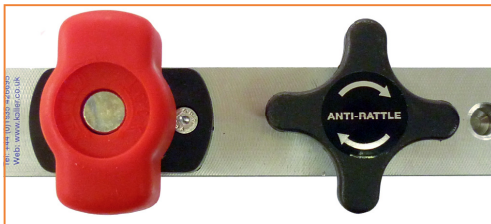

UN-LOCKED position

Tel: 01935 426695 • Fax: 01935 433766
Email: enquiries@koller.co.uk • Web: www.koller.co.uk

Copyright © 2015 Koller Engineering Ltd. All rights reserved. Issue 2 July 2015

